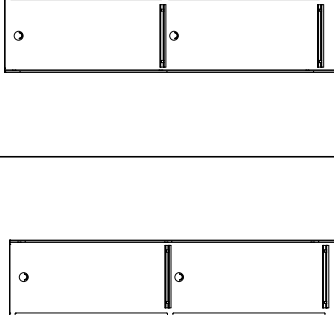

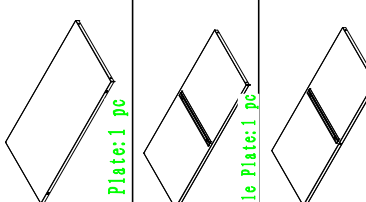
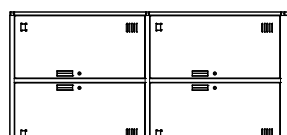

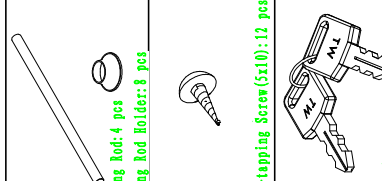
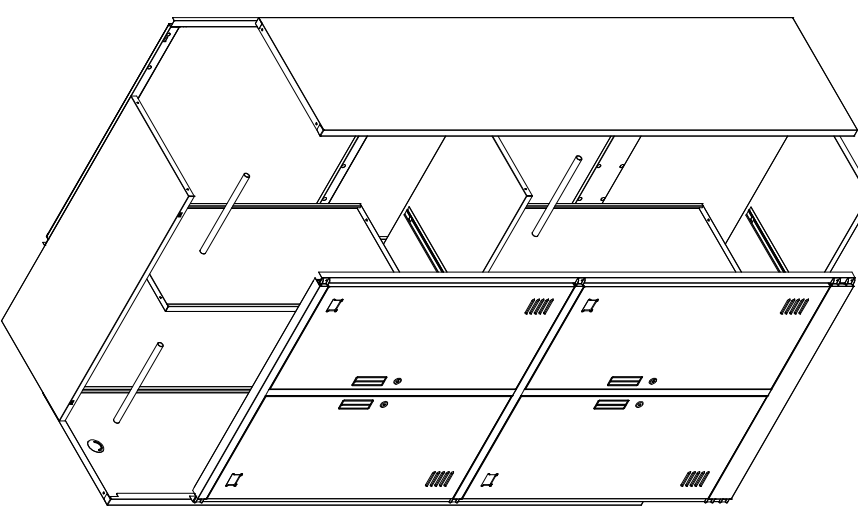
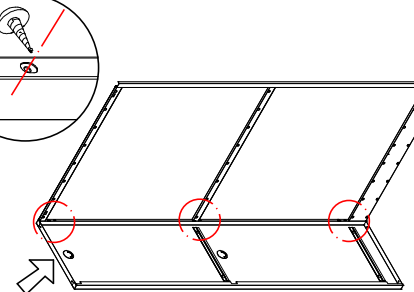
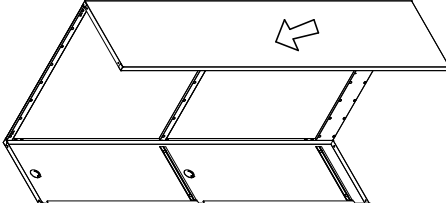
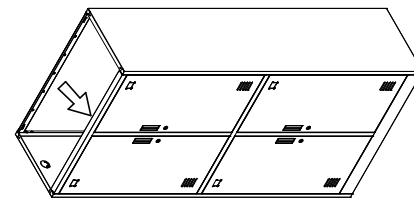
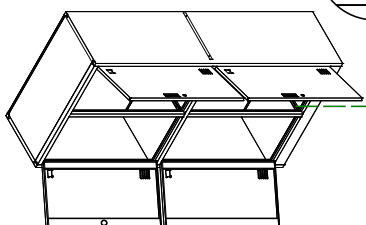
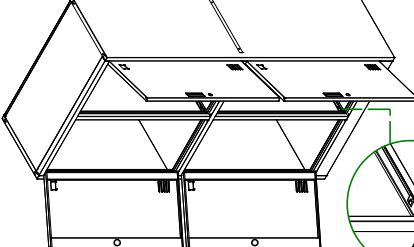
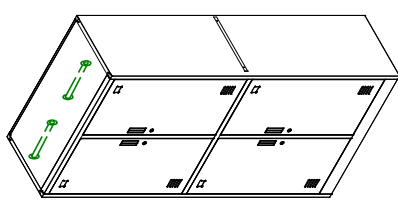


Installation:

 <p>Side Plate(Left) : 1 pc Side Plate(Right) : 1 pc</p>	 <p>Back Plate:1 pc</p>	 <p>Top Plate:1 pc Middle Plate:1 pc Bottom Plate:1 pc</p>	 <p>Door Frame:1 pc</p>	 <p>Top Division Plate:1 pc Bottom Division Plate:1 pc</p>	 <p>Hanging Rod:4 pcs Hanging Rod Holder:8 pcs Self-tapping Screw(5x10):12 pcs Key:4 pcs</p>
					
 <p>1 Bolt the side plate and back plate with self-tapping screws (5x10)</p>			 <p>2 Bolt the other side plate in the same way as the first step</p>		
			 <p>3 Fix the door frame as the sign</p>		
			 <p>4 Install the top, middle and bottom plate respectively</p>		
			 <p>5 Install the upright division plate from left to right</p>		
			 <p>6 Install the hanging rod then adjust each part till fit well after installation</p>		