












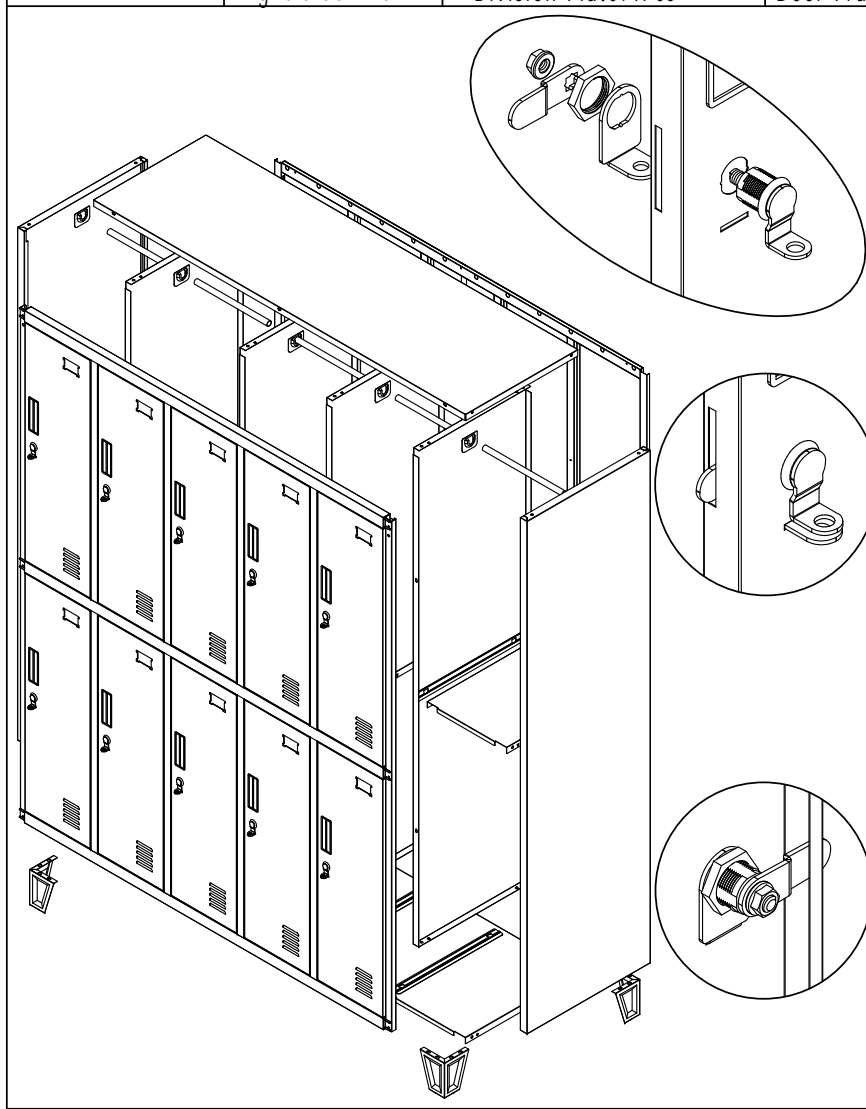
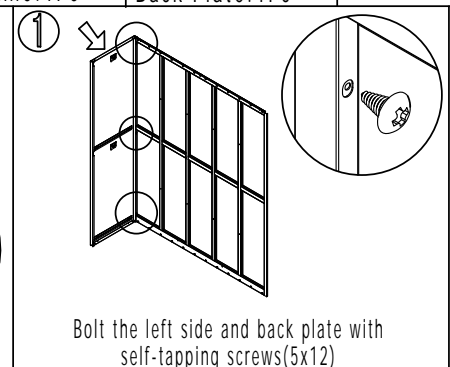
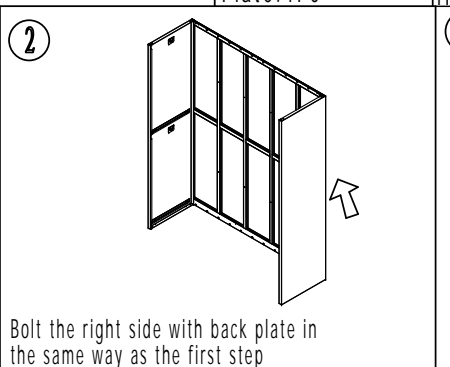



Installation:


 <p>Left Side:1Pc</p>	 <p>Right Side:1Pc</p>	 <p>Division Plate:4Pcs</p>	 <p>Door Frame:1Pc</p>	 <p>Back Plate:1Pc</p>	 <p>Top Plate:1Pc</p>	 <p>Left Middle Plate:4Pcs</p>	 <p>Hanging Rod: Left(Short)8pc Right(long)2pc</p>	 <p>Standing Feet:4Pcs</p>
					 <p>Bottom Plate:1Pc</p>	 <p>Right Middle Plate:1Pc</p>	 <p>Padlock Hasp:10Pcs</p>	 <p>Self-tapping Screw(5x12):45Pcs</p>

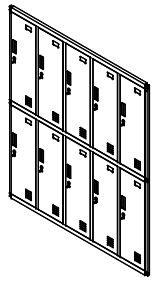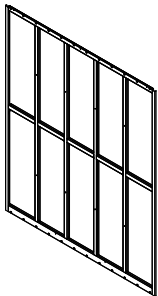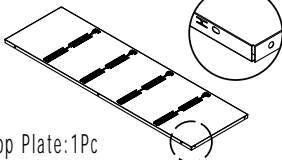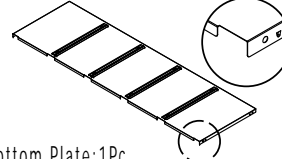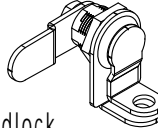



- 


1 Bolt the left side and back plate with self-tapping screws(5x12)
- 

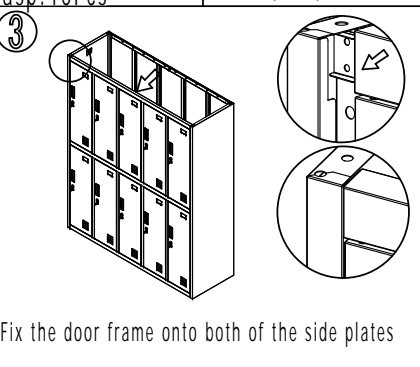
2 Bolt the right side with back plate in the same way as the first step
- 

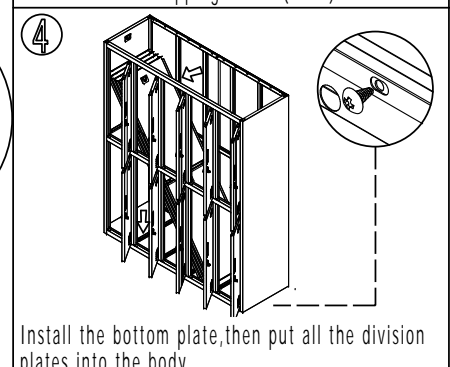
3 Fix the door frame onto both of the side plates
- 

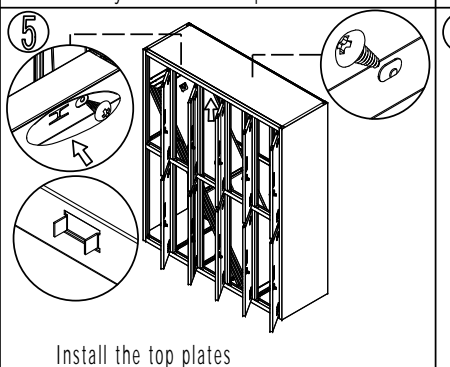4 Install the bottom plate, then put all the division plates into the body.
- 

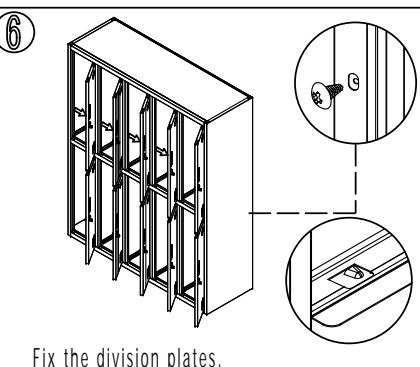5 Install the top plates
- 

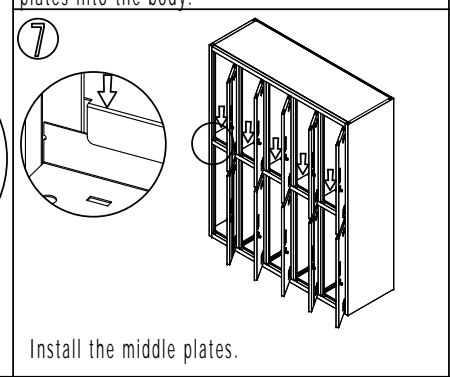6 Fix the division plates.
- 

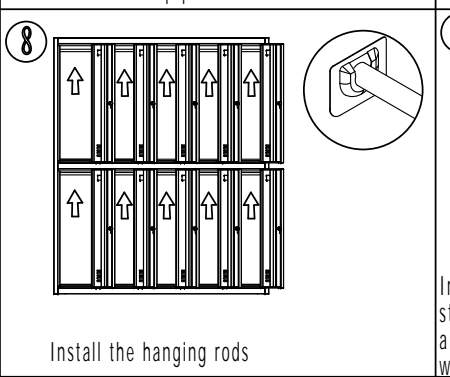7 Install the middle plates.
- 

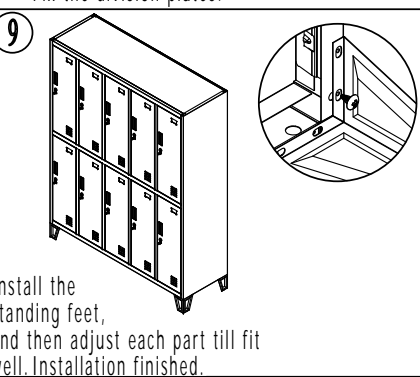8 Install the hanging rods
- 

9 Install the standing feet, and then adjust each part till fit well. Installation finished.